

## Elacin Hygiene Solutions

You believe your employees deserve the best in health and safety. At Elacin we believe your employees deserve the same kind of commitment from us when it comes to securing their health and safety.

That's why Elacin introduces a range of hygiene products which help to prolong the life span of custom-made hearing protectors and ensure happy employees.

Elacin hygiene products are available in 3 packages: [Elacin Hygiene kit](#), [Elacin Hygiene<sup>PLUS</sup> Value Pack](#) and [Elacin Refill package](#).



### Risk of blockage in the sound canal

Working in an industrial environment often involves being exposed to dust, lubricants, smoke and other harmful materials. Hearing protectors attract this kind of materials. When combined with ear wax, there is even a risk of the sound canal becoming clogged, meaning that sound may be distorted or no longer heard. Eventually this could lead to dangerous work situations.

Elacin now offers the Hygiene<sup>PLUS</sup> Value Pack. This pack - consisting of a Hygiene kit (small) and Hygiene<sup>PLUS</sup> kit (large) - allows employees to clean their hearing protectors on a daily and monthly basis, to secure their health and safety.

Using the Elacin Hygiene and Hygiene<sup>PLUS</sup> kit not only ensures that hearing protectors have a long service life, but also ensures that they offer reliable protection - against noise-induced hearing loss - for employees wearing them while still being aware of ambient noise. An additional benefit: clean hearing protectors reduce the chance of developing ear infections.

Read more about our hygiene products below.

### Elacin Hygiene Solutions for optimal protection

#### + Safety first

A clean hearing protector lives up to it's full potential and ensures optimal wearing and acoustical comfort; speech remains audible and warning signals are heard.

#### + Less absence through illness

No dirt in the ears = no ear infections

#### + Motivated users

'The proof of the pudding is in the eating'. A clean hearing protector will be actually worn.

For hearing protectors to be as effective as possible, they should be worn throughout the time of exposure. It's key to avoid over attenuation, to experience optimal wearing and acoustical comfort.

If you wish more information about the Elacin Hygiene solutions or our other products, please contact our Customer Service through [customerservice@elacin.com](mailto:customerservice@elacin.com) and +31 162 37 25 25. Or contact your regular contact person.

## Hygiene<sup>PLUS</sup> Value Pack (Art.no. 891192)

Elacin Hygiene<sup>PLUS</sup> Value Pack for a thorough monthly cleaning of your hearing protectors.

**This Hygiene kit holds the following products:**

- + 1 filter exchange tool
- + 1 cleaning box
- + 1 air blower
- + 12 cleaning tablets
  
- + 1 Elacin Hygiene kit
  - 1 wax remover tool + brush
  - 1 towel (for daily and monthly cleaning)
  - 2 sprays
  - 4 brushes
  - 1 user manual




As well as straightforward daily cleaning, we also recommend you to clean your hearing protectors thoroughly every month.

It is desirable, but not essentially necessary, to remove the acoustic filters before cleaning<sup>\*)</sup>. When the hearing protector is cleaned with the filter the attenuation can be slightly higher the first 24 hours after cleaning. After 24 hours of drying the filter has again an optimal performance.

\*) For Elacin ER > remove the filters before cleaning \*) For Elacin CH30 > don't remove the filters before cleaning, as they can't be removed.

Dry the outside of the hearing protectors with the towel and use the air blower to dry the sound canal. Once you are sure that the sound canal is completely dry, put the filters back into the hearing protectors and store the hearing protectors in the case provided.

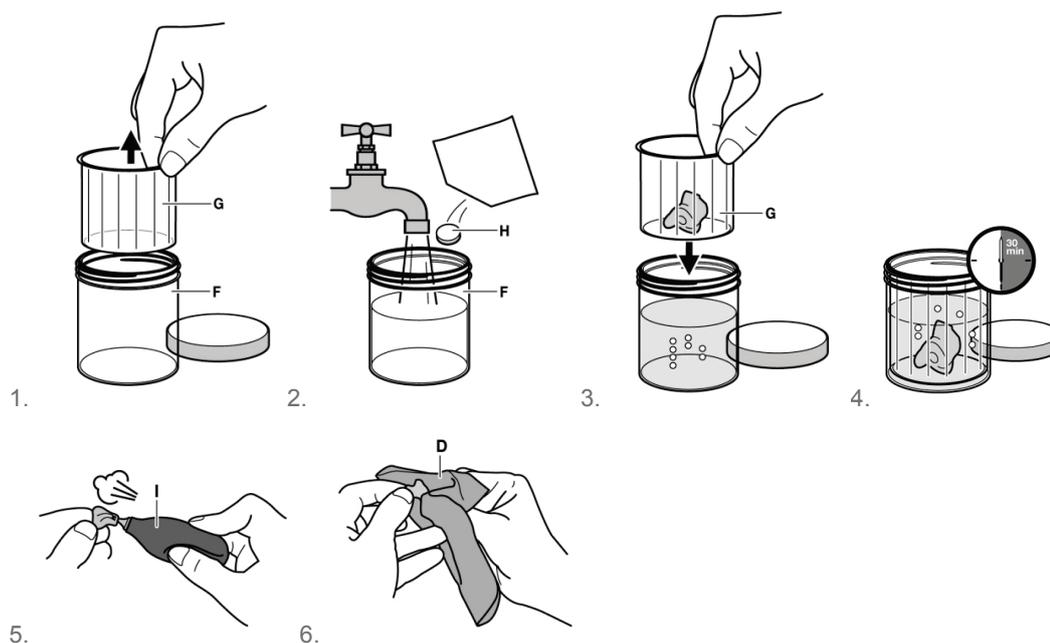

More information about the cleaning of your hearing protectors and the use of the cleaning products can be found in the user manual.

### Hygiene kit (Art.no. 891012)

Elacin Hygiene kit for easy daily cleaning of hearing protectors.


#### This kit holds the following products:

- + 1 wax remover tool + brush
- + 1 towel (for daily and monthly cleaning)
- + 2 sprays
- + 4 brushes
- + 1 user manual



At the end of every working day, spray a little disinfectant spray on the hearing protectors and use the brush to remove excess dirt. Then use the wax remover tool supplied, if necessary, to remove ear wax from the sound canal.

Finally, dry the hearing protectors using the towel and store them in the case provided.

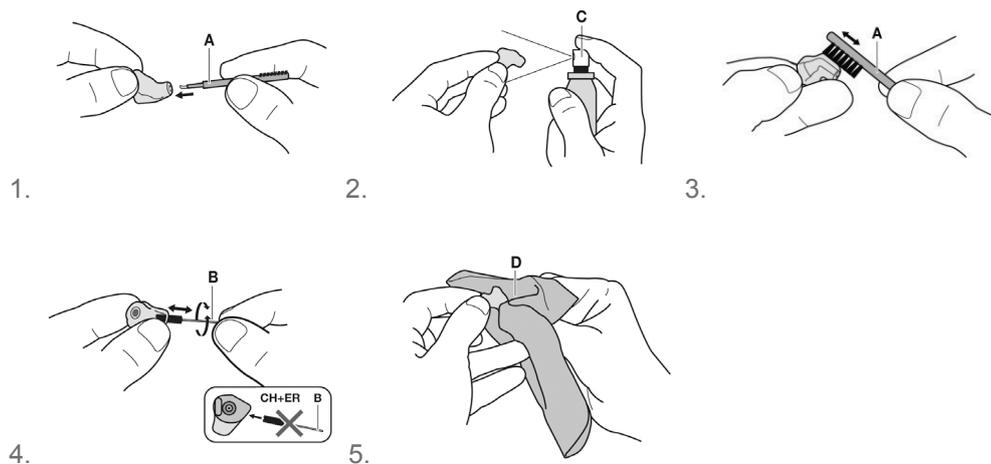

## Hygiene kit – Refill package (Art.nr. 891242)

The Elacin Hygiene kit - Refill package contains the following products:

- + 12 cleaning tablets
- + 1 spray
- + 1 user manual



For more information about the cleaning of your hearing protectors and the use of the cleaning products please refer to your regular contact person.